

LP-F1 Start Guide Rev00

1. Interface

		Manual Mode
		Length Mode
		Counting Mode
		Speed Tier (Speed Tier: 1-5.)
		Length Adjust (Range: 25-450 cm / 10-175 inch.)
		Quantity Adjust (Range: 1-999.)

Mode Selection: Press and hold the CONFIG button to make the digital display blink H/L/C for mode selection. Rotate the knob to switch between modes, and press ENTER to confirm the current mode

Parameter Settings: In any mode, press RESET → CONFIG to enter the parameter adjustment interface. When the parameter blinks, press CONFIG to switch items, and rotate the knob to change the value. Press RESET to exit or wait 15 seconds to exit automatically.

Mode Settings:

H mode: Speed only.

L mode: Speed and length.

C mode: Speed, length, and quantity.

2. Feeding

<p>Step 1: Fold one corner of the kraft paper.</p>	<p>Step 2: Fold diagonally multiple times, with a length of approximately 50 cm. After folding, fold the paper in half again.</p>	<p>Step 3: Insert the kraft paper into the inlet, press and hold RESET to start feeding. Press RESET or use the foot pedal to stop and cut off.</p>
---	--	--

3. Operation

Mode	Operation
	<p>Press and hold the foot pedal to start outputting paper.</p> <p>Release the foot pedal to stop and cut the paper.</p> <p>The minimum output length is 25 cm.</p>
	<p>Press the foot pedal to start outputting paper. Remove one segment, and the next will follow.</p>
	<p>Press the foot pedal again to start continuous output.</p> <p>Press the foot pedal during this process to pause the machine.</p>

Manual Rewind: On the mode page, with no alarm, press RESET and CONFIG simultaneously to rewind 15 cm.