


LP-IB500C V1.1 Start Guide Rev00

1. Power on

- Connect the pedal to the machine
- Plug the power cord
- Make sure the E-stop button is released
- Turn on the power switch

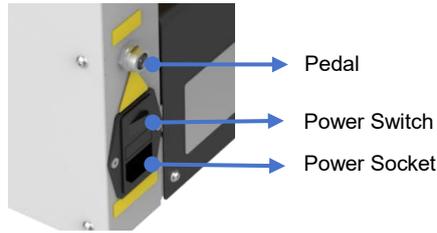

2. Feeding

<p>Step 1: Open the safety cover.</p>	<p>Step 2: Turn the handle to the OP position.</p>	<p>Step 3: Wind the paper following the arrow.</p>
<p>Step 4: Press the feed button.</p>	<p>Step 5: Turn the handle to the CL position.</p>	<p>Step 6: Close the safety cover.</p>

NOTE: Please ensure the kraft paper enters the feeding inlet with both sides flush. Incorrect feeding may cause machine jams or paper tearing.

3. Operation

Parameter range: output length (10~999cm)

output speed (3 settings, third setting recommended)

Trigger by: Pedal or button

Working status: The machine is working The machine is stopped

Mode	Operation
	<p>Press pedal or button to start, and release to stop.</p> <p>The paper length depends on the trigger time, with the shortest length produced when released immediately after triggering.</p>
	<p>The paper pad is dispensed according to the preset length.</p> <p>Press pedal or button to start, and stop automatically after completion.</p>