


# LP-HA V3.1 Start Guide Rev00

## 1. Power on

- Connect the pedal to the machine
- Plug the power cord
- Make sure the E-stop button is released
- Turn on the power switch

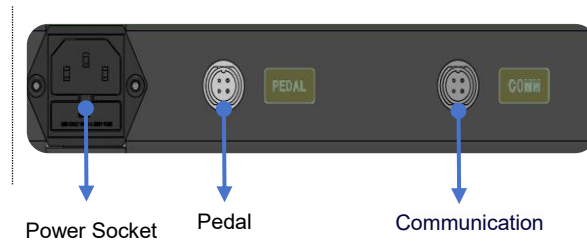


## 2. Feeding

**Step 1:** Put the tissue paper and honeycomb paper on their support rods.

**Step 2:** Thread the roll of paper into the feeding inlet channel, following the paper wind diagram.

**Step 3:** Press the feed button. Feeding is successful when paper appears at the outlet.

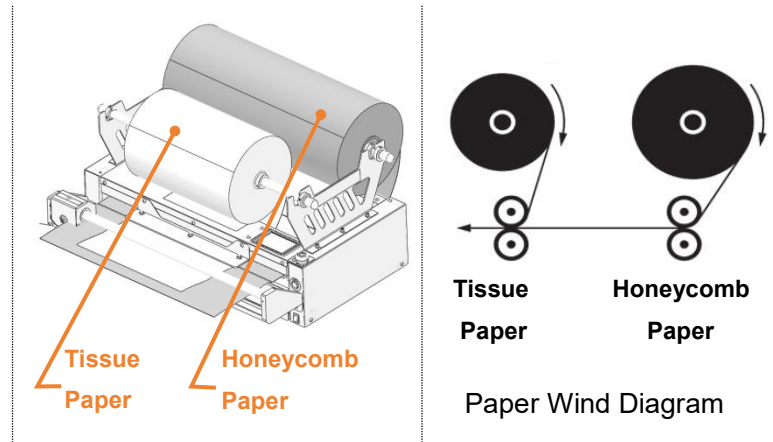

## 3. Operation

Parameter range: output length (10~999cm)

output speed (3 settings, third setting recommended)

Trigger by: Pedal or button

Working status: The machine is working      The machine is stopped

Mode	Operation
Manual	Press pedal or  Jog button to start, and release to stop. The length of the paper pad output depends on the trigger time. Releasing after triggering produces shortest paper length.
Fixed	The paper pad is dispensed according to the preset length. Press pedal or  Jog button to start, and stop automatically after completion.